


Item	Part code	Tip Size	Length (mm)
1	BE504901	1/2" Adaptor	36
2	BE504902	3/8" Adaptor	28
3	BE5049H4	H4	30
4	BE5049H4L	H4	75
5	BE5049H5	H5	30
6	BE5049H5L	H5	75
7	BE5049H6	H6	30
8	BE5049H6L	H6	75
9	BE5049H7	H7	30
10	BE5049H7L	H7	75
11	BE5049H8	H8	30
12	BE5049H8L	H8	75
13	BE5049H10	H10	30
14	BE5049H10L	H10	75
15	BE5049H12	H12	30
16	BE5049H12L	H12	75
17	BE5049M5	M5	30
18	BE5049M5L	M5	75
19	BE5049M6	M6	30
20	BE5049M6L	M6	75
21	BE5049M8	M8	30
22	BE5049M8L	M8	75
23	BE5049M10	M10	30
24	BE5049M10L	M10	75
25	BE5049M12	M12	30
26	BE5049M12L	M12	75
27	BE5049T20	T20	30
28	BE5049T20L	T20	75
29	BE5049T25	T25	30
30	BE5049T25L	T25	75
31	BE5049T27	T27	30
32	BE5049T27L	T27	75
33	BE5049T30	T30	30
34	BE5049T30L	T30	75
35	BE5049T30XL	T30	200
36	BE5049T40	T40	30
37	BE5049T40L	T40	75
38	BE5049T40XL	T40	200
39	BE5049T45	T45	30
40	BE5049T45L	T45	75
41	BE5049T45XL	T45	200
42	BE5049T50	T50	30
43	BE5049T50L	T50	75
44	BE5049T55	T55	30
45	BE5049T55L	T55	75
46	BE5049T60	T60	30
47	BE5049T60L	T60	75
48	BE5049T70L	T70	100
49	BE5049T80L	T80	70

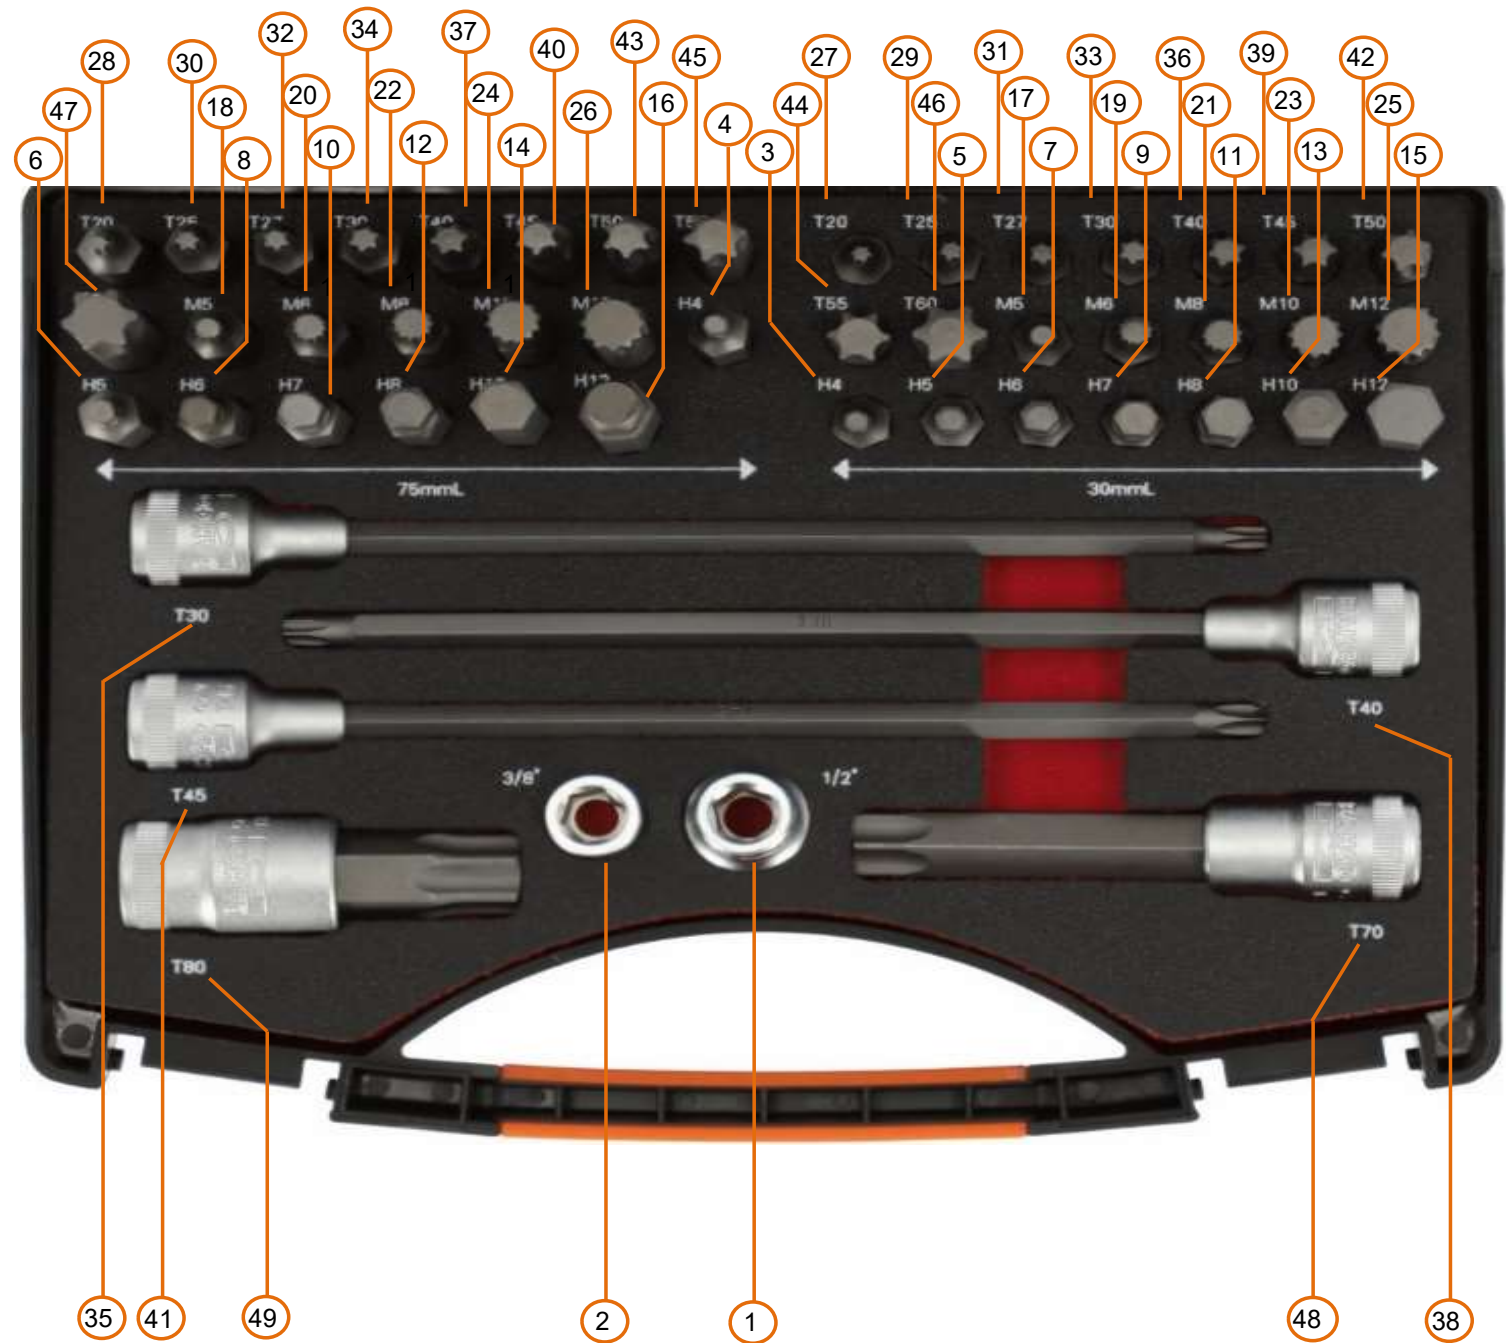

Revision: 02

SNA Europe does not cover the causes over negligence in tool use and/or repair, inadequate care, or abnormal usage conditions. Follow the instructions for proper use, safety, maintenance and servicing given by SNA Europe